 



Removing and fitting the needle threader

Firstly, we need to remove the needle threader. To do this you will need to lower the needle threader down so you can access the screw more easily. Then using a screwdriver remove the screw M2.6X6 screw and washer. Once you have done this the needle threader will slide down off the shaft.

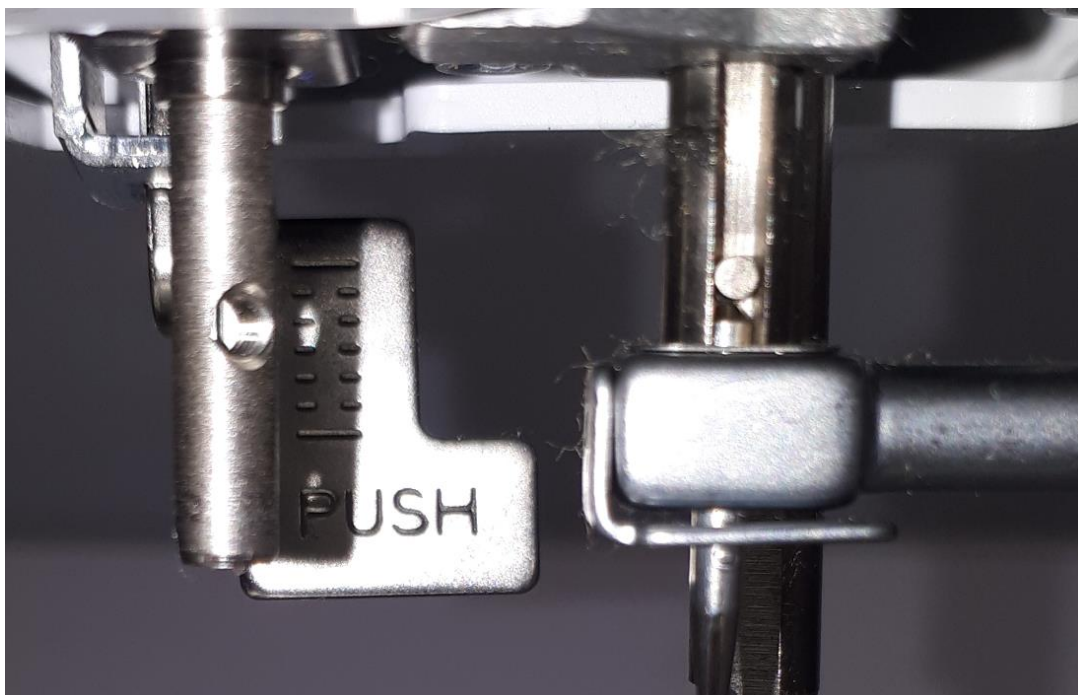

 To fit the needle threader, you will need to slide the threader over the shaft and line up the screw with the hole in the shaft.



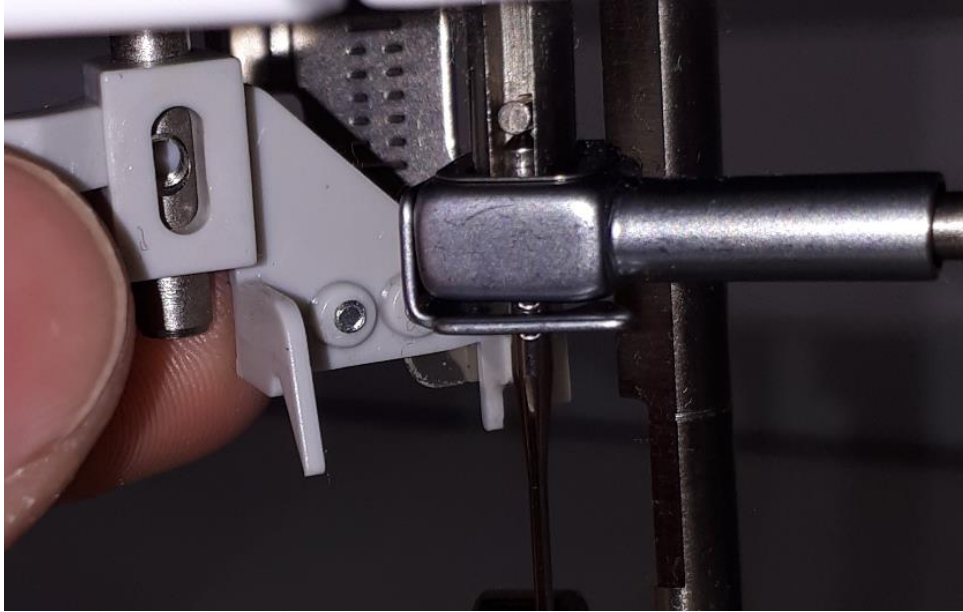

Tighten the screw up just enough to allow you to move the threader up and down slightly on the shaft and then line up the threader hook so that the threader hook is at the top of the needle eye. Then tighten the screw.

